

HIDDEN CABINET LOCK



USER MANUAL

JKRF33

Unscalable format

1.1 Functions of a Master card: opening the lock, adding unlocking cards and clearing opening cards.
Functions of a User card: open the lock only.

1. Adding user cards: Take the Master card to contact the EM reader, then two sounds of "beep", motor rotating and the lock openen (with lock bolt back into the lock core) indicate the lock is in the state of adding unlocking cards.

You can add unlocking cards-take another EM card to contact the EM reader, one short sound of "beep" indicates the card is read and set as user card successfully.

You can add cards continuously, and 15 unlocking cards can be set at most.

2.-Clearing all of the user cards : Take the Master card to contact the EM reader constantly. If the card is read successfully, 5 rapid sounds of "beep" for 5 times and following 3 long sounds of "beep" indicate that all of the unlocking cards are cleared.

1.2 Switch to double-card unloking mode.

Initialization: Supply power, and then press the inital button on the circuit board for about 3 seconds (or use something acerose, like toothpick, to jab into the small hole on the lock core). Loosen the button when you hear a sound of "beep" press the white button again, then you will hear double sounds of "beepbeep". Double sounds repeat 5 times indicate the double-card-unlocking mode is initialized successfully.

Setting the Master card: After initialization, take a EM card to contact the EM reader, then two sounds of "beep" indicate the card is read and set as Master card.

Adding user cards: Take the master card to contact the EM reader, then one sounds of "beep", motor rotating, the lock opened (with lock bolt back into the lock core) indicate the lock is in the state of adding unlocking cards. You can add cards take a guest card to contact the EM reader, a short sound indicates this card is read and setting as guest card successfully; next blue light on indicates this card is read and setting as service card. At most, 14 service cards can be added for a lock.

HIDDEN CABINET LOCK



USER MANUAL

JKRF33

Unscalable format

Double-card unlocking mode:

Take the customer card to contact the EM reader. One short sound with blue light flashing indicates the card is read successfully. Then take a service card to contact the EM reader. Simple music on indicates the card is read successfully. At this moment, the motor will rotate and door will be opened (with lock bolt back into the lock core).

*Note: In the double-card-unlocking mode, the first card added by the Master card is guest card, and all of the following cards are service cards. When unlocking the door, only when the customer card and a service card together can the lock be unlocked. Which card to be read first is not required. Use two service cards or two guest cards can not unlock the lock.

Clearing all of the unlocking cards: Take the Master card to contact constantly the EM reader. If the card is read successfully, 5 rapid sounds of "beep" and following 3 long sounds of "beep" indicate that all the guest card and service cards are cleared.

Switch to single-card-unlocking mode from double-card-unlocking mode:

please press the initialize button on the circuit board for about 3 seconds (or use something acerose, lie toothpick, to jab into the small hole on the lock core).

Loosen the button when you hear a sound of "beep". At the moment that you hear a long sound of "beep" with 5 short sounds of "beep" following, the lock is initialized (all cards of the lock are cleared) and in the single-card-unlocking mode.

