


POCKET DOOR LOCK




Installation Guide

CMY080 / CMY081

1. Use template to route hole in the door.
2. Insert lock case into hole and fix with self-tapping screw, then insert spindle.
3. Install the flush handle with the portion containing the screw positioned on the interior side of the door. Fix with machine screw.
4. Install the strike box and plate on the door frame making sure to align it with the lock case.

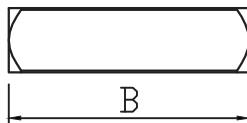

Spindle Length	
B	Door width
30	35 ~ 39
35	40 ~ 44

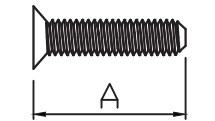

Machine Screw Length	
A	Door width
19	35 ~ 39
24	40 ~ 45

