DEADBOLTS

DEADBOLT ONLY KEY

Cod. CJSLL

Installation guide

Unscaled format

HOW TO INSTALL THIS DEADBOLT LOCK

1. MARK DOOR & BORE HOLES

Fold template over edge of door. Mark site 60mm (2-3/8") or 70mm (2-3/4") of holes.

Bore Ø 54mm (2-1/8") and Ø23mm (2-9/32") holes through door.

Cut out a 58 x 26 x 3 mm (2-9/32" x 1" x 1/8") base.

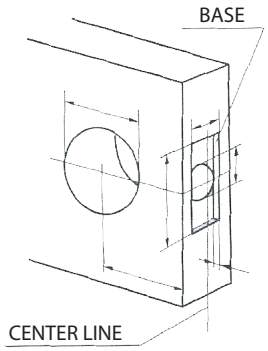

2. INSTALL LATCH

Adjustable latch for 60mm (2-3/8") or 70mm (2-3/4") backset.

Push the deadbolt inward.

Keep the arrow of the deadbolt always pointing upwards.

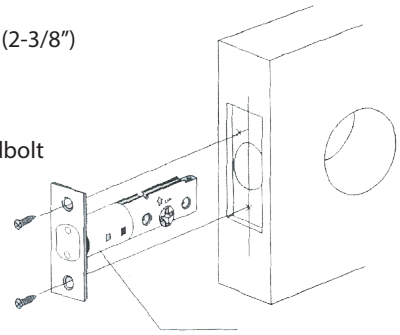

3. INSTALL THE OUTSIDE CYLINDER

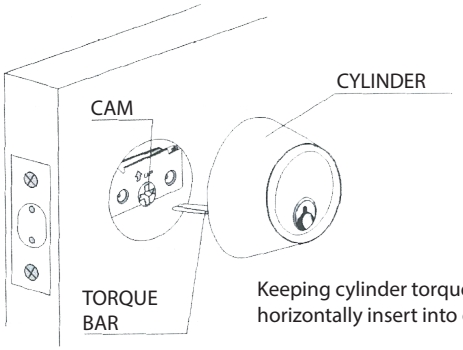

Keeping cylinder torque bar horizontally insert into cam slot.

4. INSTALL INSIDE TRIM (CYLINDER)

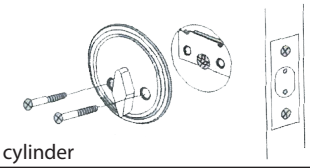

Single cylinder

Double cylinder

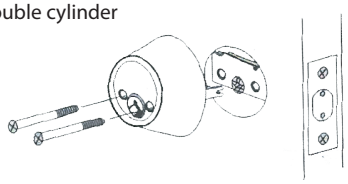

Keeping cylinder torque bar vertically insert into cam slot

5. INSTALL STRIKE

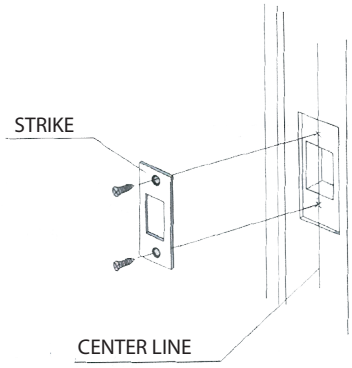

INSTRUCTION FOR AD JUSTABLE LATCH

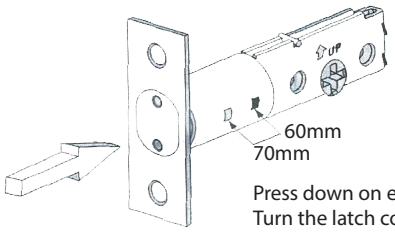

Press down on end of deadbolt. Turn the latch cover, pull or push. Make backset become 70mm (2-3/4") or 60mm (2-3/8").

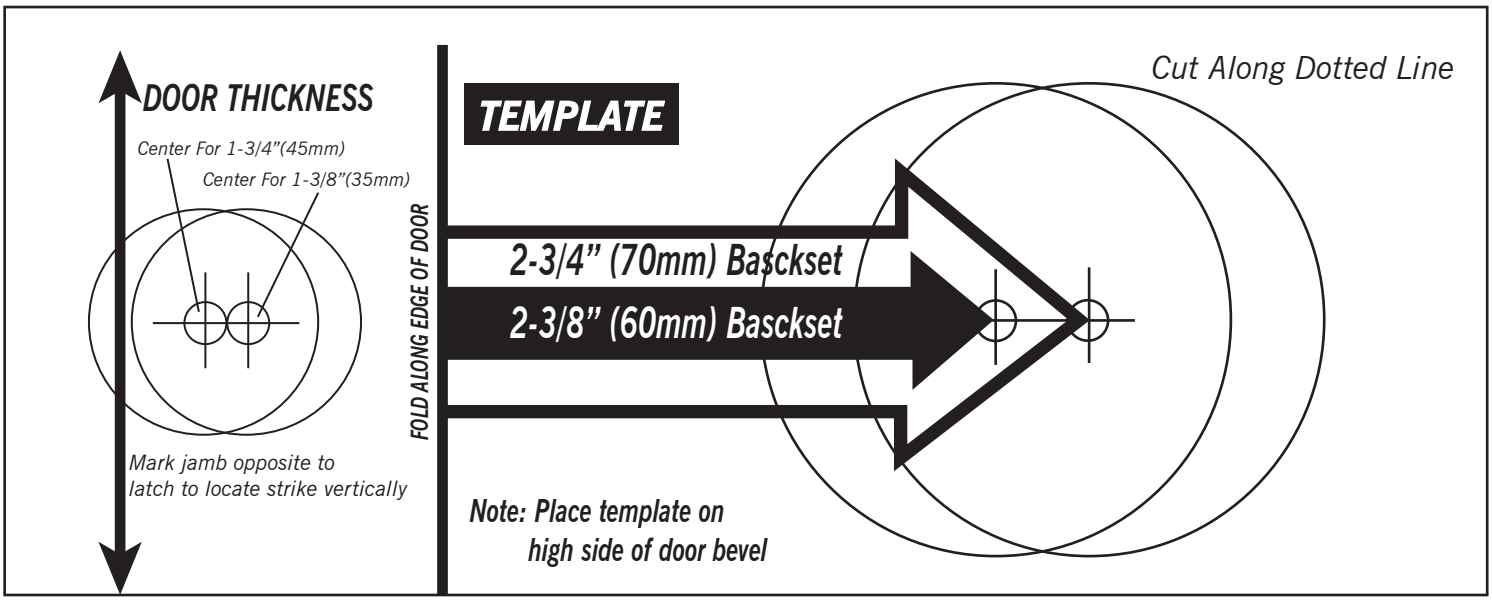
DOOR THICKNESS
Center For 1-3/4"(45mm)
Center For 1-3/8"(35mm)
Mark jamb opposite to
latch to locate strike vertically
FOLD ALONG EDGE OF DOOR
TEMPLATE
Cut Along Dotted Line
2-3/4" (70mm) Basckset
2-3/8" (60mm) Basckset
Note: Place template on
high side of door bevel